
Assembly Directions for Comfo Cozi Dining Chair

#PZDC2127, #PEDC2127

STEP #1 - A. Attach the seat to the back using 1- ¼" x 3¼" Allen Head Bolt and Flange Nuts.

B. Attach the arm assembly to the Seat and Back using

2- 1/4" x 31/2" and 1- 1/4" x 21/2" Allen Head Bolts and Flange Nuts.

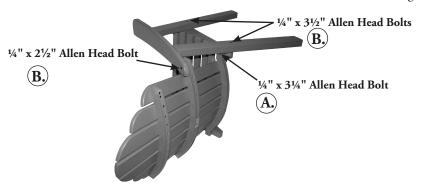

STEP #2 -Repeat step one.



STEP #3 -Your Chair is complete!





PACKAGE CONTENTS

- 1 Back
- 1 Seat
- Arms with Legs
- Hardware Package

HARDWARE PACKAGE

- 1/4" x 31/2" Allen Head Bolts
- 2 1/4" x 31/4" Allen Head Bolts
- 1/4" x 21/2" Allen Head Bolts
- 1/4" Flange Nuts

Firmly tap bolts into pre-drilled

Use to measure bolts

TOOLS NEEDED:

Hammer 7/16" Wrench Allen Wrench (included)

holes before tightening.



2